

Installation Diagram

Notice:

1. Please select the right modes according to your demand, then install it according to the installation diagram. If only hot water function is required, please select heating+hot water mode and then put the hot water sensor into the hot water tank.
2. Two-way valve and BV valve are optional for installation. Only if you need to control the temperature in different zones, please install both.
3. Fan coil can be controlled by linkage with the secondary circulation pump. Meanwhile, a passive linkage thermostat shall be installed.

